



CONTEMPORARY KITCHEN AND PREP FAUCET INSTALLATION INSTRUCTIONS



BEFORE YOU BEGIN YOUR INSTALLATION:

Turn off water supply.

Observe all local plumbing codes.

Inspect plumbing for signs of damage. Replace as necessary.

DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS:



Adjustable Wrench




Phillips Screwdriver




Channel Locks

HANDLE POSITION


Waterstone faucets are designed to be installed in 3 different faucet positions. Choose to have the handle on left, front or right. Your faucet is factory configured for the most common positions - a front and right side installation. To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.

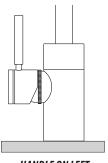

HANDLE ON LEFT

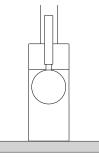


HANDLE IN FRONT

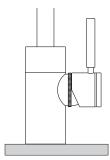


HANDLE ON RIGHT


FAUCET INSTALLATION

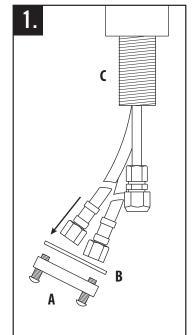


Remove clamp nut (A) and washer (B) from threaded shroud (C).

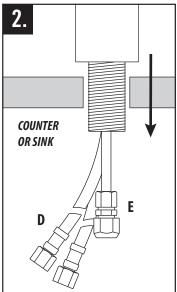

Fit flexible hoses (D) and rigid sidespray tube (E) through hole on counter or sink. (No plumbers putty is required. O-ring seals base).

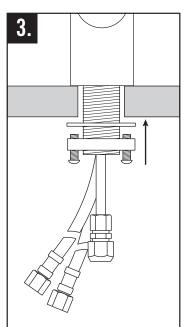


Slide washer and thread the clamp nut onto threaded shroud. Tighten nut snug to underside of sink or counter.

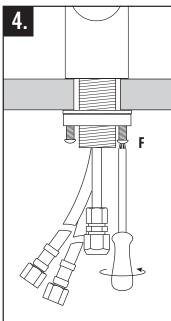


Turn faucet to the desired handle position. Securely tighten clamp screws (F).

HOW TO ADJUST HANDLE POSITION AND HANDLE TENSION

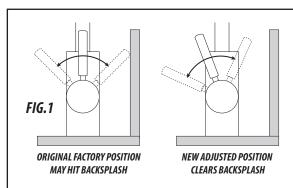


On some kitchen countertops, the handle may hit the backsplash when the faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 22.5 degrees to avoid hitting backsplash.

Unscrew and remove metal cap (A) and Hot and Cold Indicator Ring (B). Unscrew and remove holding screw (C) and washer (D). Hold handle (E) in a vertical position. Wiggle and pull straight off faucet. Rotate handle 22 degrees away from backsplash then slide handle back onto valve stem (F). Insert holding screw with washer and tighten. Slide Hot and Cold Indicator Ring onto handle and thread metal cap back into place. To adjust handle tension, turn ring (G) clockwise to increase

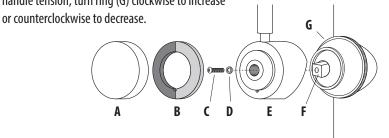


CONNECTING SUPPLY HOSES


Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). **DO NOT** use teflon tape or plumbers putty. Turn water back on and check for leaks.

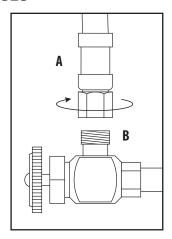


OPTIONAL HOT COLD INDICATOR RING

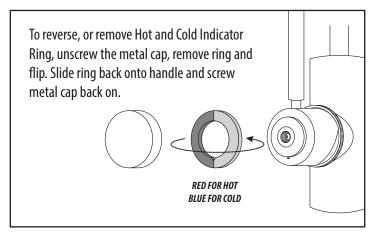



CONNECTING SIDE SPRAY (OPTIONAL)

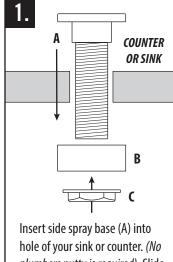


Insert side spray base (A) into hole of your sink or counter. (No plumbers putty is required). Slide brass spacer (B) onto shroud. Screw on attaching nut (C) and securely tighten.

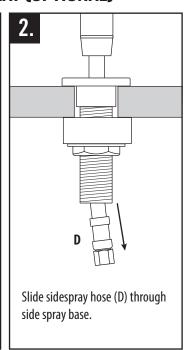


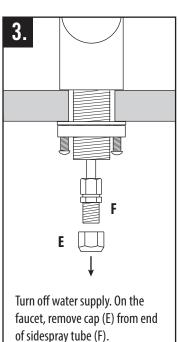


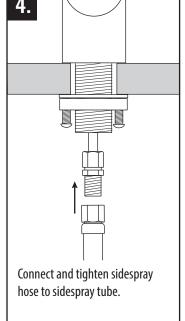



INSTALL SOAP/LOTION DISPENSER (OPTIONAL)

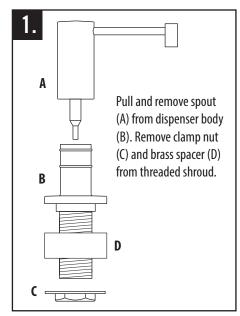


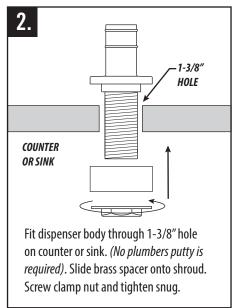

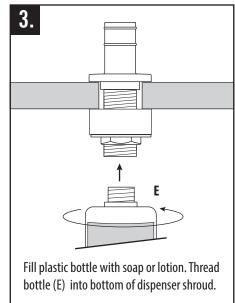


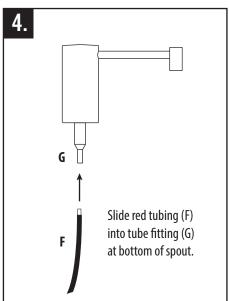


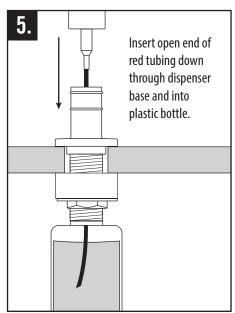


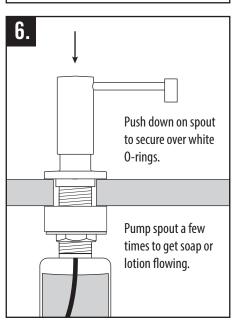


INSTALL AIR SWITCH (OPTIONAL)

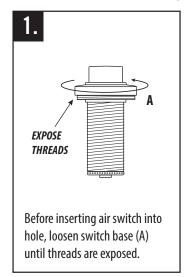


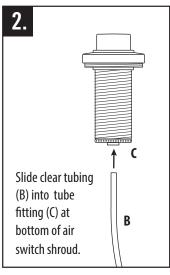


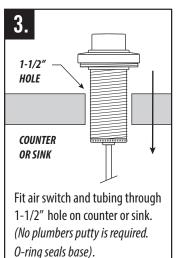


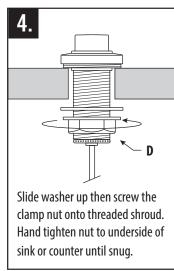


CONTINUED FROM PREVIOUS PAGE

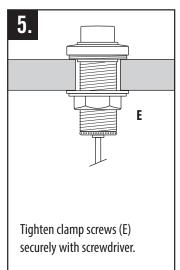


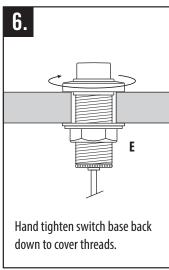


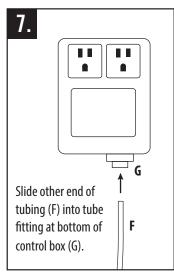


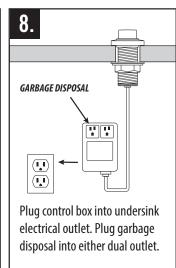



INSTALL SINGLE PORT AIR GAP (OPTIONAL)

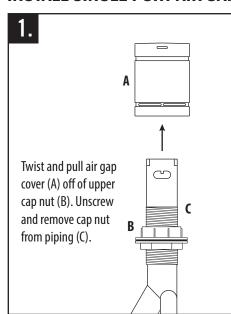


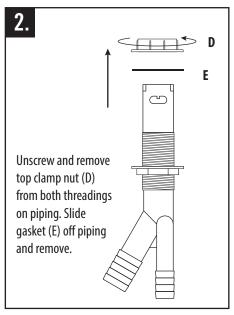

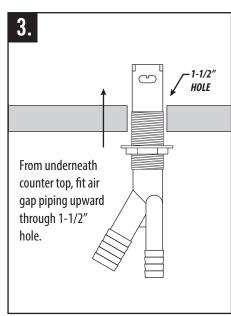


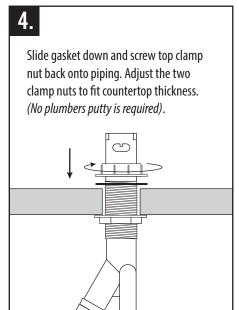

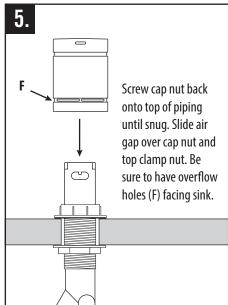

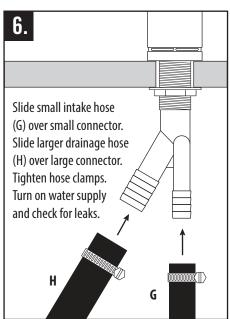


INSTALL DUAL PORT AIR GAP (OPTIONAL)

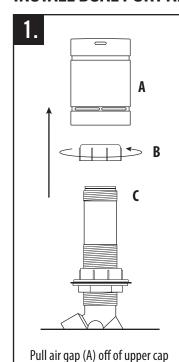


nut (B). Unscrew and remove

cap nut from piping (C).

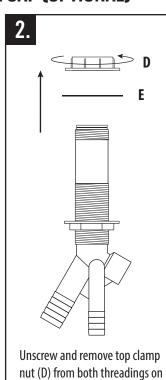

piping. Slide gasket (E) off piping

and remove.

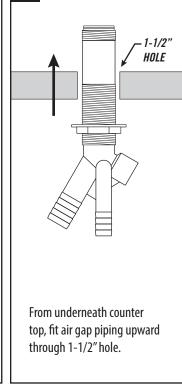

3.

