



PLP PULLDOWN LOCK ASSEMBLY

CONTEMPORARY MODEL #S 5300, 5400, 5700, 5800, 5900, 5930

TRADITIONAL MODEL #S 5100, 5200, 5500, 5600

BEFORE YOU BEGIN YOUR INSTALLATION:



Turn off water supply.

REQUIRED TOOLS:



Adjustable Wrench



Pliers

1.

CONTEMPORARY NOZZLE

Turn off water supply. Open faucet to relieve pressure. Pull nozzle down from spout to expose swivel assembly.

2.

Hold the top ring of the knurl swivel assembly (A) with pliers. Use an adjustable wrench and loosen latch connector (B). Remove nozzle.

3.

Slide latch connector up to expose compressor collar (C). Depending on hose configuration, there may be either a black collar or two brass metal circles. Remove compressor collar.

4.

Unscrew PLP lock assembly (D) from spout head and remove.

5.

Slide new lock assembly onto hose and hand tighten to spout head. Slide latch connector over hose connection and up onto hose. Attach compressor collar, then slide latch connector back down covering entire hose connection.

6.

Using pliers and an adjustable wrench, attach hose back on to nozzle. Tighten until snug. Turn water supply back on and check for leaks.