




# TRADITIONAL AND ENDEAVOR WHEEL PULLDOWN FAUCET INSTALLATION INSTRUCTIONS

Model #s:

5100

5125

5130

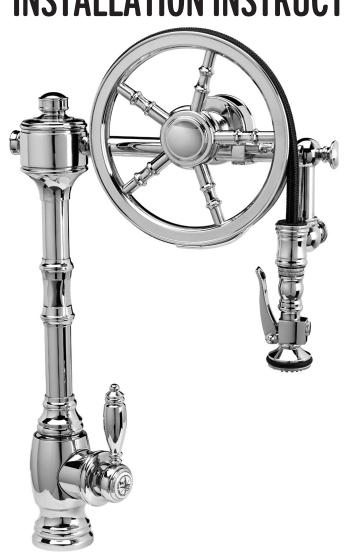



#### **BEFORE YOU BEGIN YOUR INSTALLATION:**



Turn off water supply.

2

Observe all local plumbing codes.



Inspect plumbing for signs of damage. Replace as necessary.



**DO NOT** use petroleum based products on this faucet.

**REQUIRED TOOLS:** 



Adjustable Wrench



 
Phillips Screwdriver




**Channel Locks** 

#### HANDLE POSITION


Waterstone faucets are designed to be installed in 3 different faucet positions. Choose to have the handle on left, front or right. Your faucet is factory configured for the most common positions - a front and right side installation. To reverse this and have the handle positioned on the left, connect the hose for cold water to the hot supply and the hose for hot water to the cold supply. This will maintain the relationship of pulling the handle for hot water or pushing for cold water.



HANDLE ON LEFT

 


HANDLE IN FRONT

 


HANDLE ON RIGHT


### TRADITIONAL OR CONTEMPORARY WHEEL FAUCET INSTALLATION

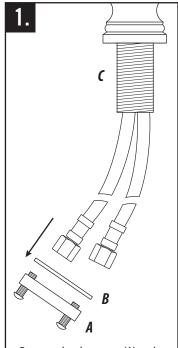


Remove the clamp nut (A) and washer (B) from the threaded shroud (C).

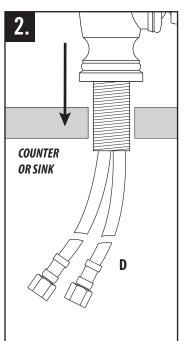

Fit flexible hoses (D) through hole on counter or sink. (No plumbers putty is required. O-ring seals base).

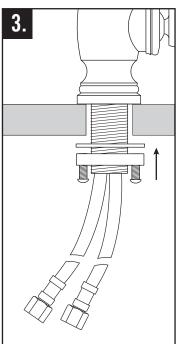


Slide washer and thread the clamp nut onto threaded shroud. Tighten nut snug to underside of sink or counter.

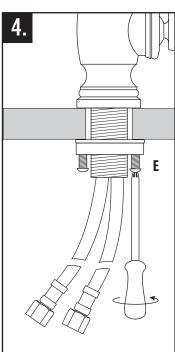


Turn faucet to the desired handle position. Securely tighten clamp screws (E).

#### CONNECTING SUPPLY HOSES

Before connecting supply hoses, flush supply stops to clear any debris. Place a bucket underneath stops and run water for 5 to 10 seconds. Turn water off. Carefully position hot and cold supplies so they will not interfere with other hoses. Connect supply hoses (A) to supply stops (B). **DO NOT** use teflon tape or plumbers putty. Turn water back on and check for leaks.

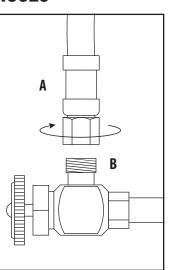


#### **OPTIONAL DECORATIVE BUTTONS**

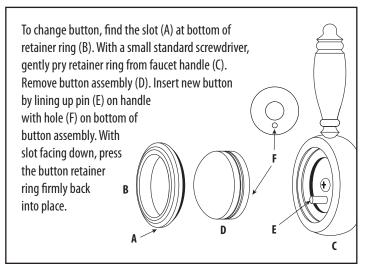


#### **HOW TO ADJUST HANDLE POSITION AND HANDLE TENSION**


On some kitchen countertops, the handle may hit the backsplash when the faucet handle is positioned to the left or right (Fig. 1). Waterstone gives you the option of adjusting the handle 45 degrees for traditional or 22 degrees for contemporary models to avoid hitting backsplash. The contemporary models **DO NOT** need handle tension adjustment.

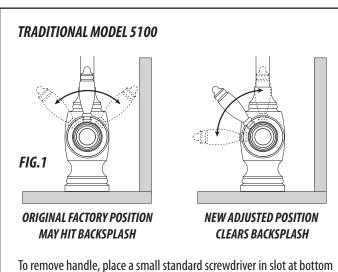


To remove handle, place a small standard screwdriver in slot at bottom of metal ring that surrounds handle button (A). Gently pry button from handle (B). Unscrew and remove holding screw (C) and washer (D). Hold handle in a vertical position. Wiggle and pull straight off faucet. Rotate handle away from backsplash 45 degrees then slide handle back onto valve stem (E). Insert holding screw with washer

holding screw with washer and tighten. Snap handle cap back into place. To adjust handle tension, turn ring (F) clockwise to increase or counterclockwise to decrease handle tension.

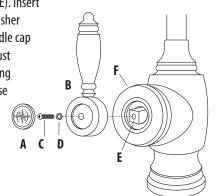


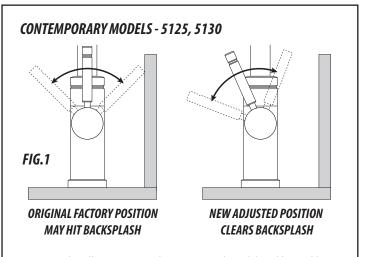

To remove handle, unscrew and remove metal cap (A) and hot/cold indicator ring (B). Unscrew and remove holding screw (C) and washer (D). Hold handle (E) in a vertical position. Wiggle and pull straight off faucet. Rotate handle 22 degrees away from backsplash then slide handle back onto valve stem (F). Insert holding screw with washer and tighten. Slide hot/cold indicator ring

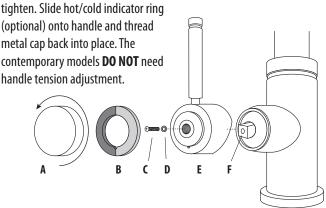


#### **CLEANING DEBRIS SCREEN**

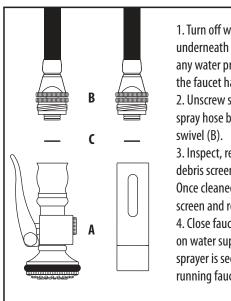


- 1. Turn off water supplies underneath sink and remove any water pressure by opening the faucet handle.
- 2. Unscrew sprayer (A) from spray hose by holding knurled swivel (B)
- 3. Inspect, remove and clean debris screen (C) in sprayer. Once cleaned, replace debris screen and reattach to swivel.
- 4. Close faucet handle and turn on water supplies. Make sure sprayer is secure and sealed by running faucet.


#### **CLEANING AERATOR - CONTEMPORARY**

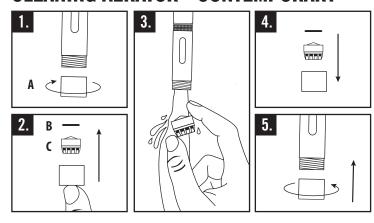


- 1. Gently unscrew and remove spout tip (A) by hand.
- 2. Remove 0-ring (B). To remove aerator (C), push with finger from bottom.
- 3. Thoroughly rinse aerator with water until all debris is removed.
- 4. Place aerator, then 0-ring back into spout tip.
- 5. Gently screw spout tip, by hand, snuggly back onto spout.

#### **CLEANING AERATOR - TRADITIONAL**

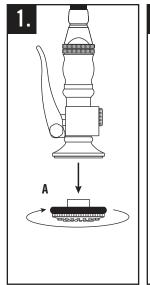


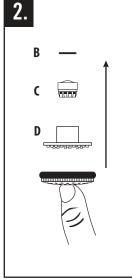


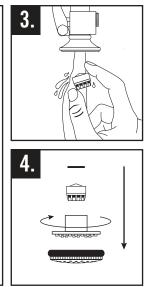



- 1. Gently unscrew and remove spray face (A) by hand.
- 2. To remove O-ring (B), aerator (C) and spray face insert (D), push with finger from bottom.
- 3. Thoroughly rinse aerator with water until all debris is removed.
- 4. Place spray face insert back into spray face and spin until it clicks into place. Next, place aerator and O-ring into spray face. Gently screw spray face, by hand, snuggly back onto sprayer.


## **INSTALL SOAP/LOTION DISPENSER (OPTIONAL)**

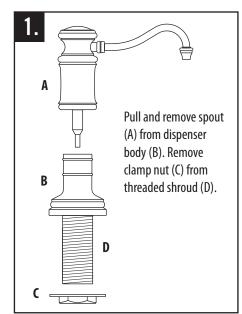


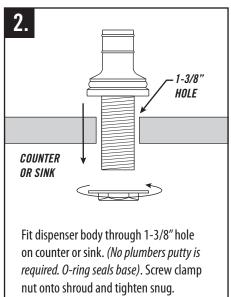

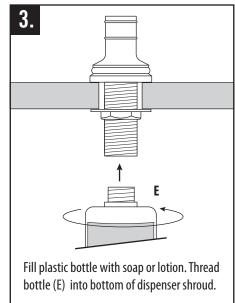


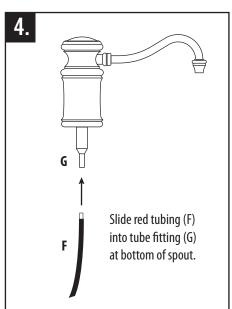


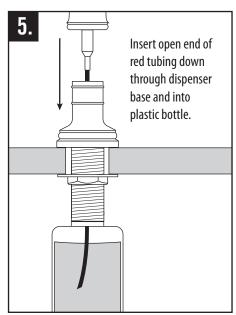


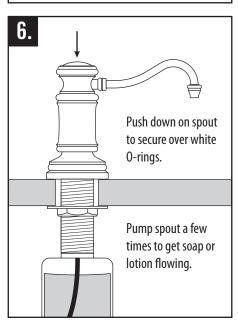


# **INSTALL AIR SWITCH (OPTIONAL)**

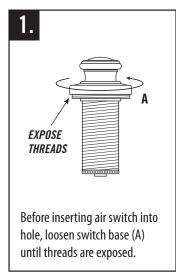


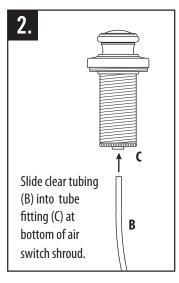


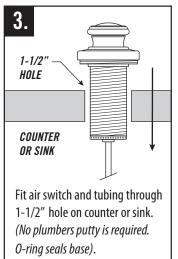


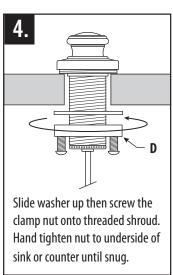


#### **CONTINUED FROM PREVIOUS PAGE**

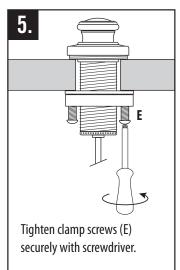


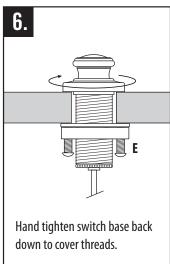


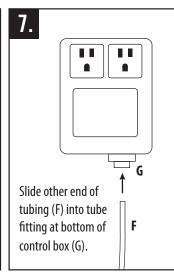


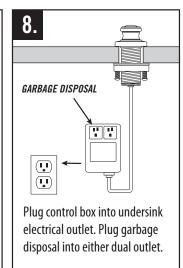



# **INSTALL SINGLE PORT AIR GAP (OPTIONAL)**

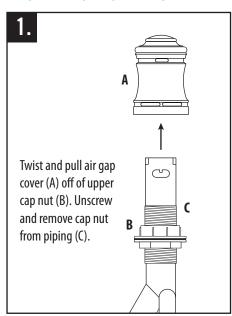


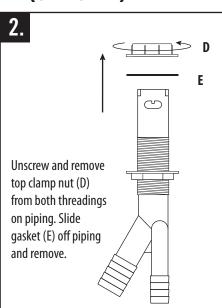

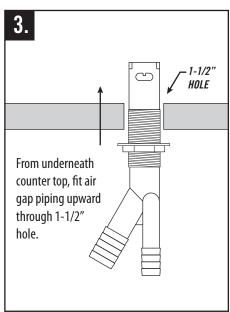


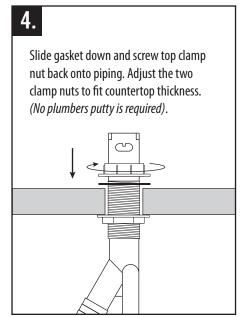

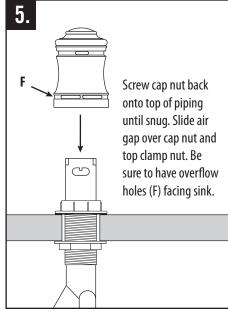

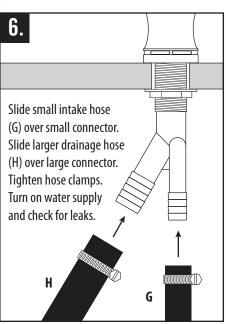


# **INSTALL DUAL PORT AIR GAP (OPTIONAL)**

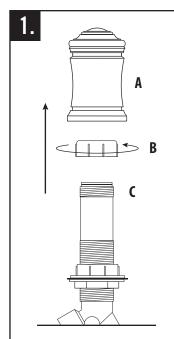


Pull air gap (A) off of upper cap

nut (B). Unscrew and remove


cap nut from piping (C).

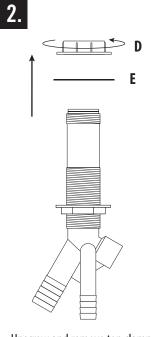

Unscrew and remove top clamp nut (D) from both threadings on piping. Slide gasket (E) off piping and remove.

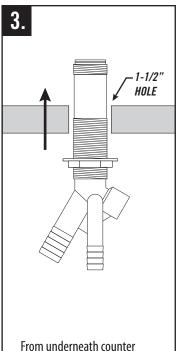

From underneath counter top, fit air gap piping upward through 1-1/2" hole.

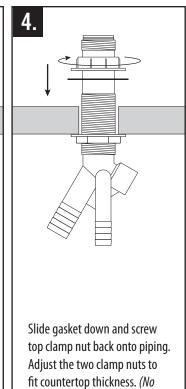

plumbers putty is required).

