

BEFORE YOU BEGIN YOUR INSTALLATION:



Turn off water supply.

REQUIRED TOOLS:




Small Standard Screwdriver

CONTEMPORARY FAUCET MODEL #s 1900HC, 1900H, 1900C, 2500


1.

Unscrew riser cap (A) by hand and remove from riser top (B).

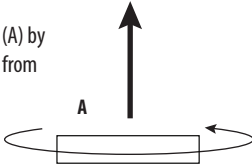


2.

Slide faucet spout (C) straight up and off of riser top (D).

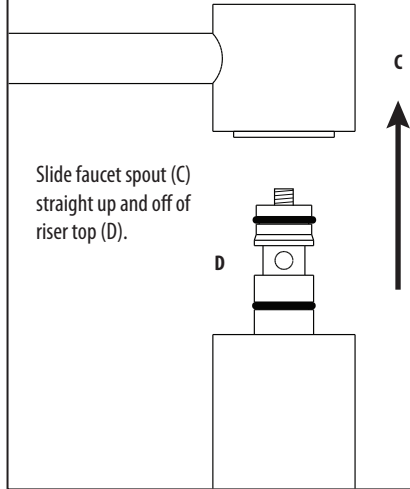

3.

Using a small screwdriver or finger nail, gently pry the old O-rings (E) off from the riser top.

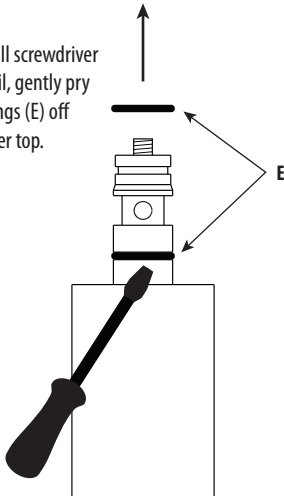

4.

Replace the riser top O-rings and reassemble in reverse order. Turn on water and check for leaks.

