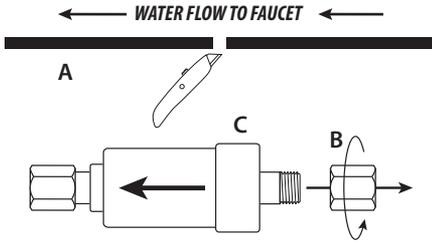


## PRV MODEL # 4500

**1.**

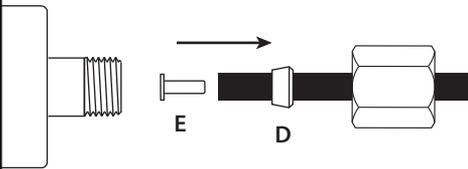
Turn off water supply. Cut blue tubing (A) with utility knife at an appropriate length. Remove hex nut (B) from right end of PRV (C).


**2.**

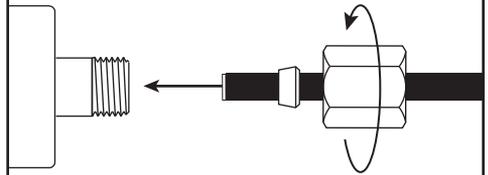
Slide hex nut onto blue tubing.


**3.**

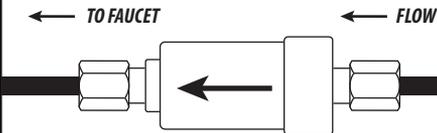
Slide plastic sleeve (D) onto blue tubing about 1/2". Push brass insert (E) into end of tubing.


**4.**

Insert tube end into PRV and tighten hex nut by hand. Tighten 1/4 more turn with adjustable wrench to secure.


**5.**

Repeat install steps on left end of PRV. Be aware of water flow direction of each piece of blue tubing before securing.


**6.**

Secure unit to cabinet. Turn water back on and check for leaks.

